



ASSEMBLY INSTRUCTION

 
 

 

 
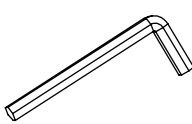
 

MELVILLE EXTENSION

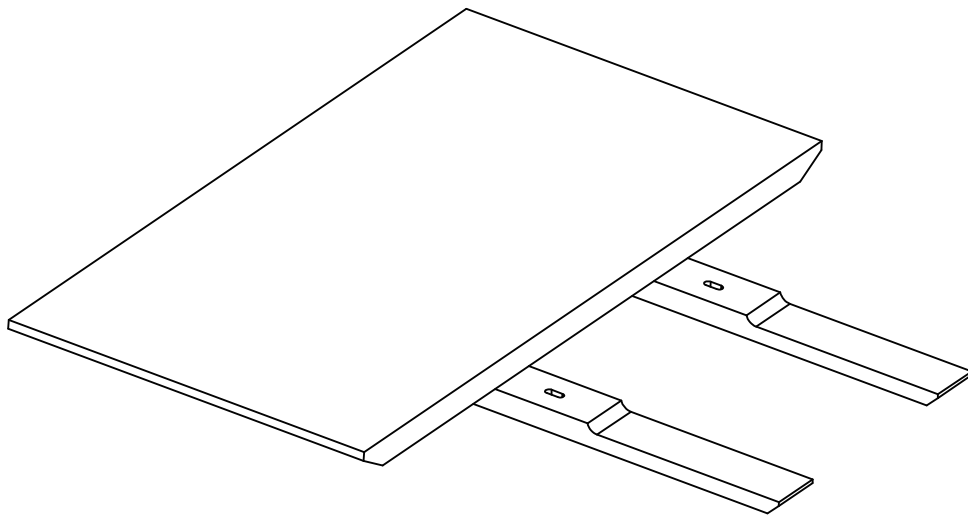


ROWICO

H O M E

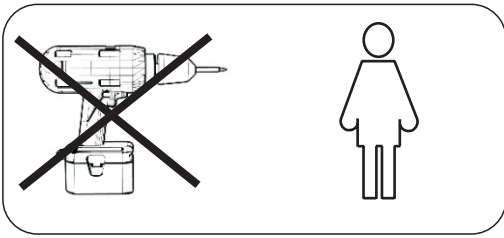


<p>Ax1</p> 	<p>Dx4</p>  <p>M8×40MM</p>
	<p>E x4</p>  <p>M8×Ø12</p>
<p>Bx2</p> 	<p>Fx4</p>  <p>M8×Ø16</p>
	<p>Gx4</p>  <p>Ø8×40</p>
<p>Cx1</p> 	<p>Hx2</p>  <p>M6×55MM</p>
	<p>Ix2</p>  <p>M8×Ø20</p>


①

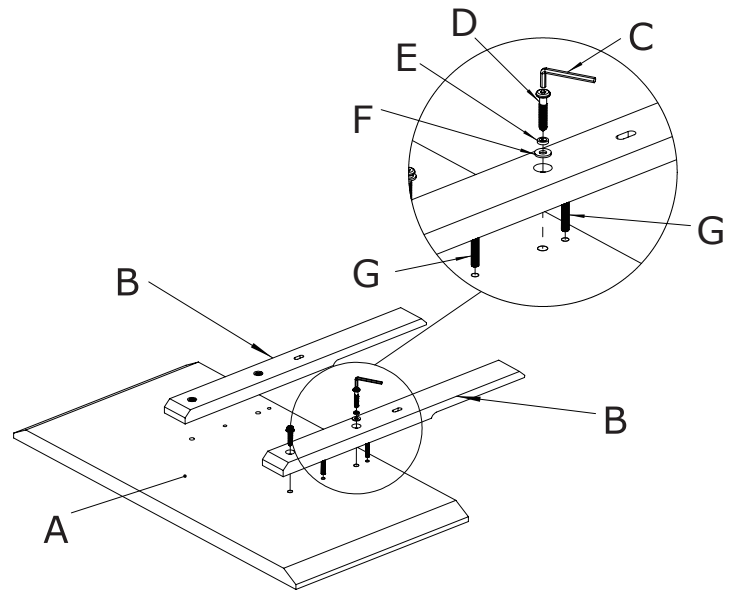

②

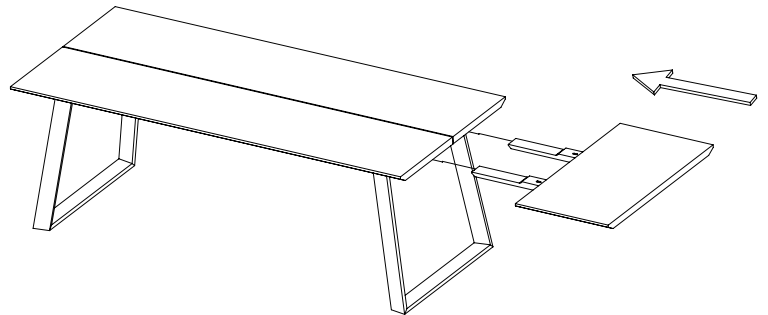

③

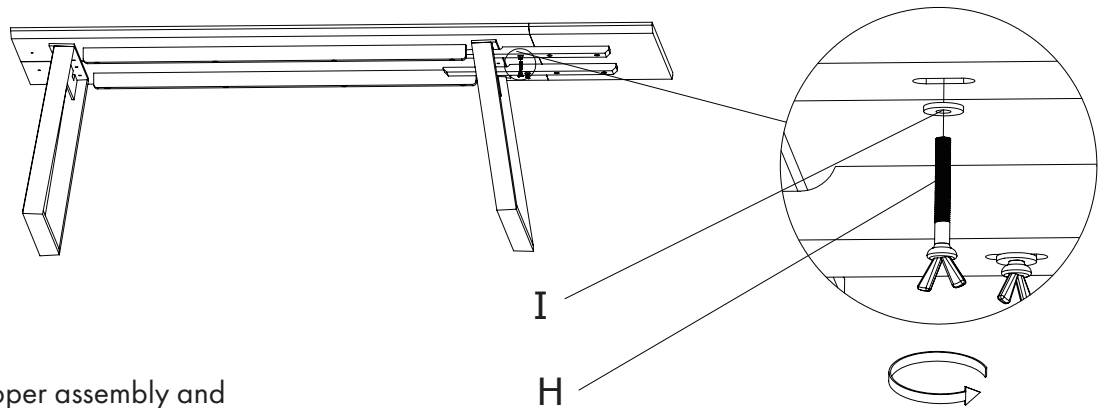

Note:
Improper use, improper assembly and mishandling may lead to defects/ cracks appearing.