



ASSEMBLY INSTRUCTION

CARRADALE DINING TABLE 170 RECTANGULAR WITH V-LEG

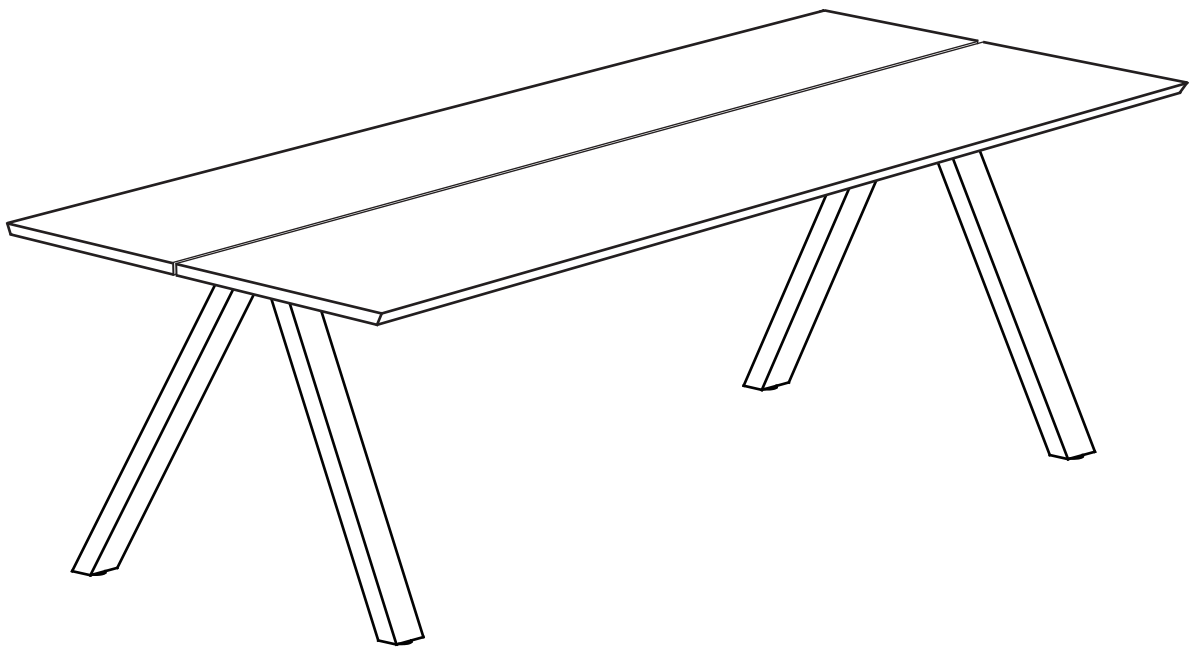


ROWICO

H O M E

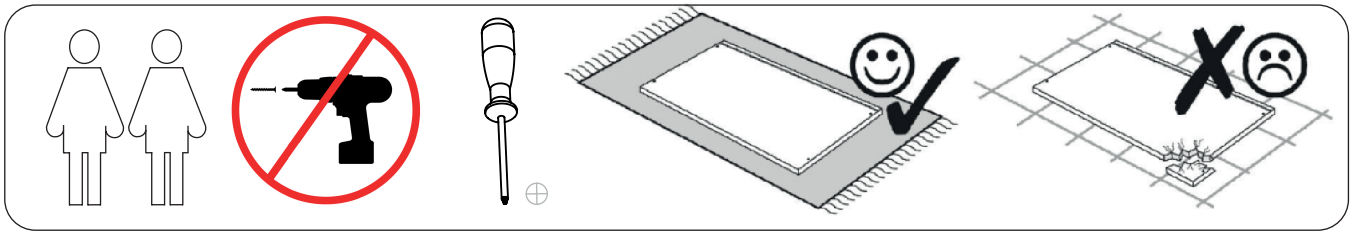


Ax2 	Bx2 	Dx2 	Mx2 	E _{x1} # 4
Hx8 	Ix8 	Jx16 M6 × 12	Nx8 M6 × 65	Fx16 M6 × 12
				Kx1


①

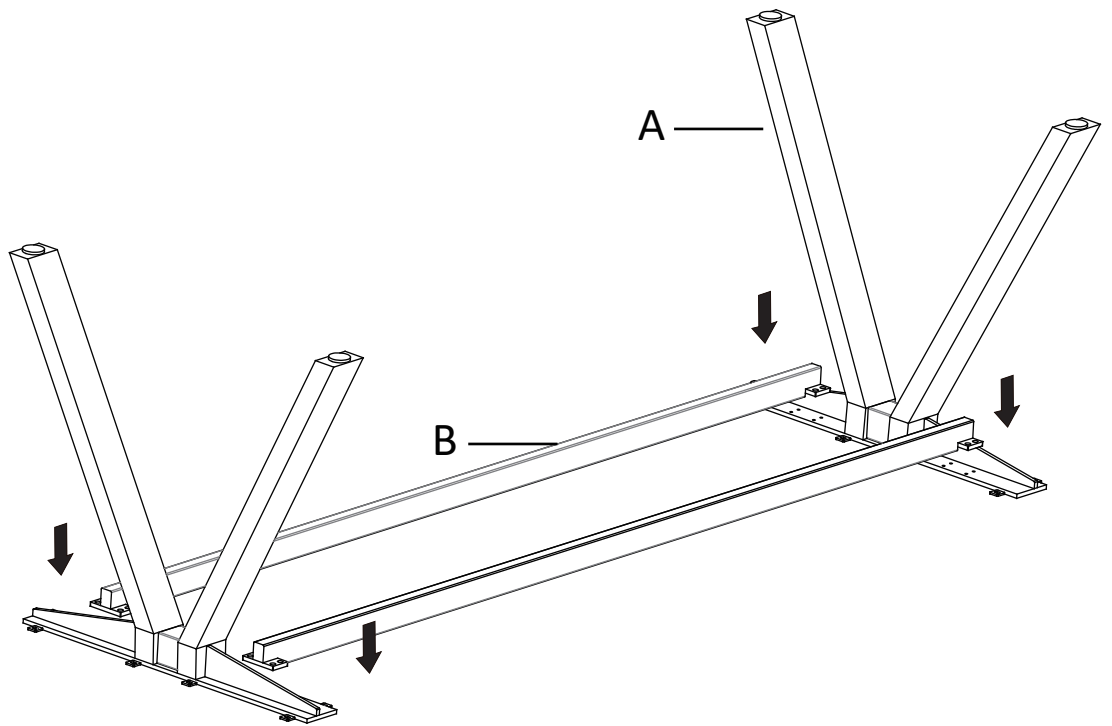


②

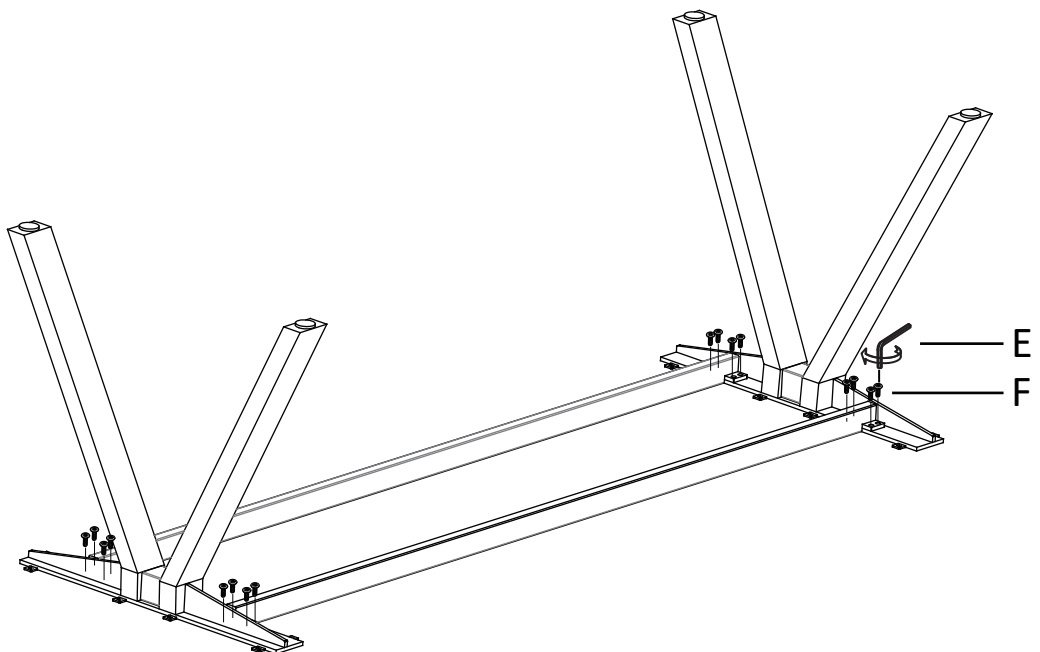


3

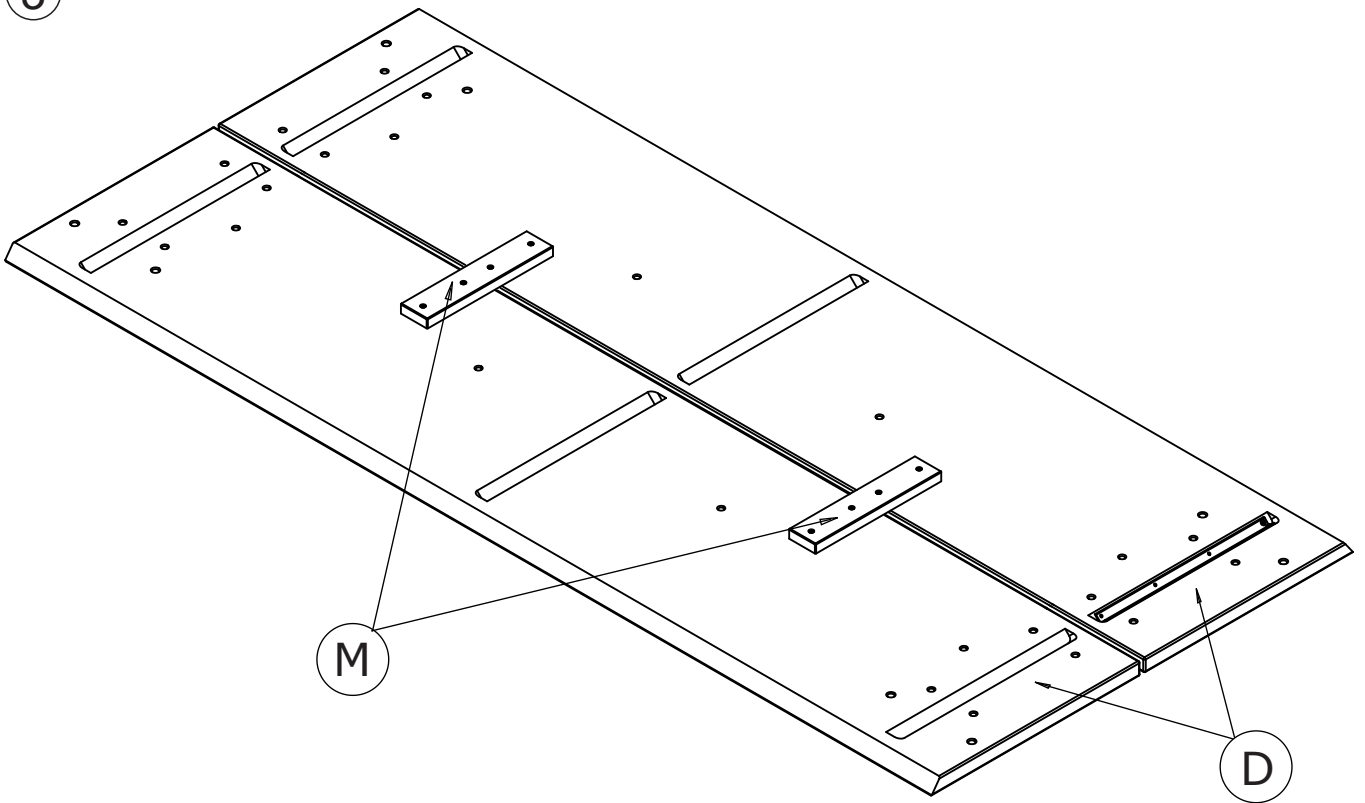

4

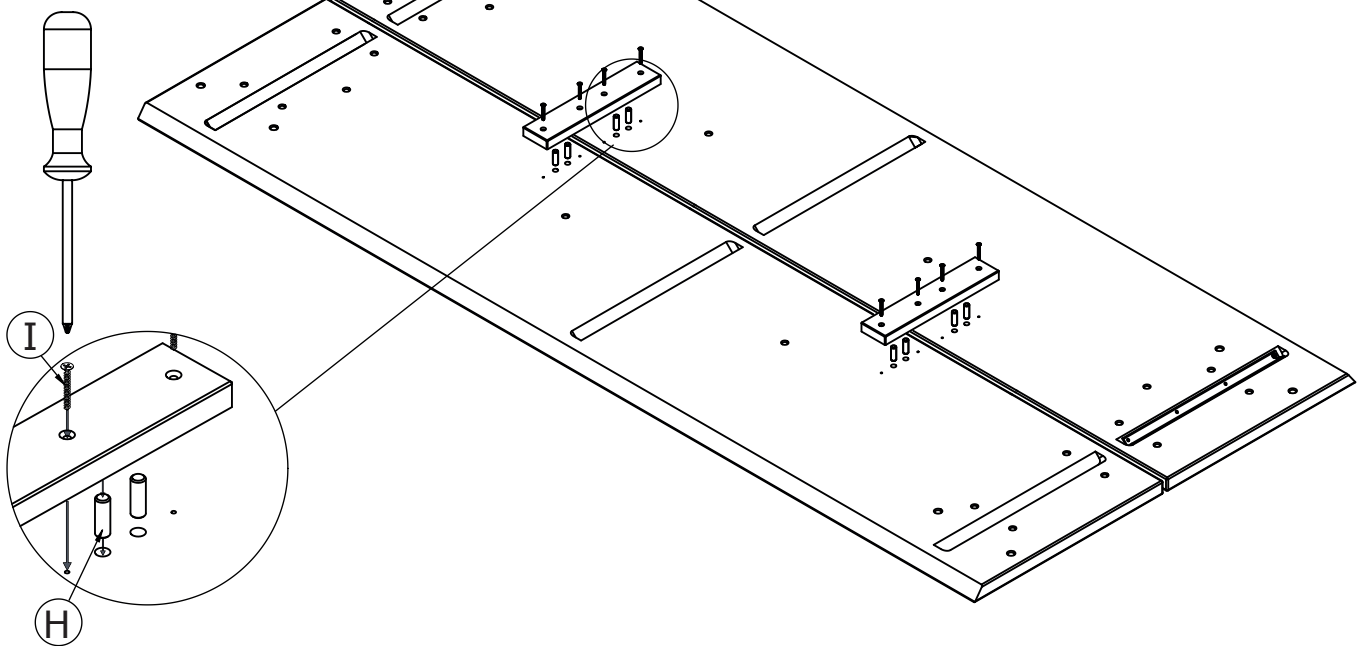



5

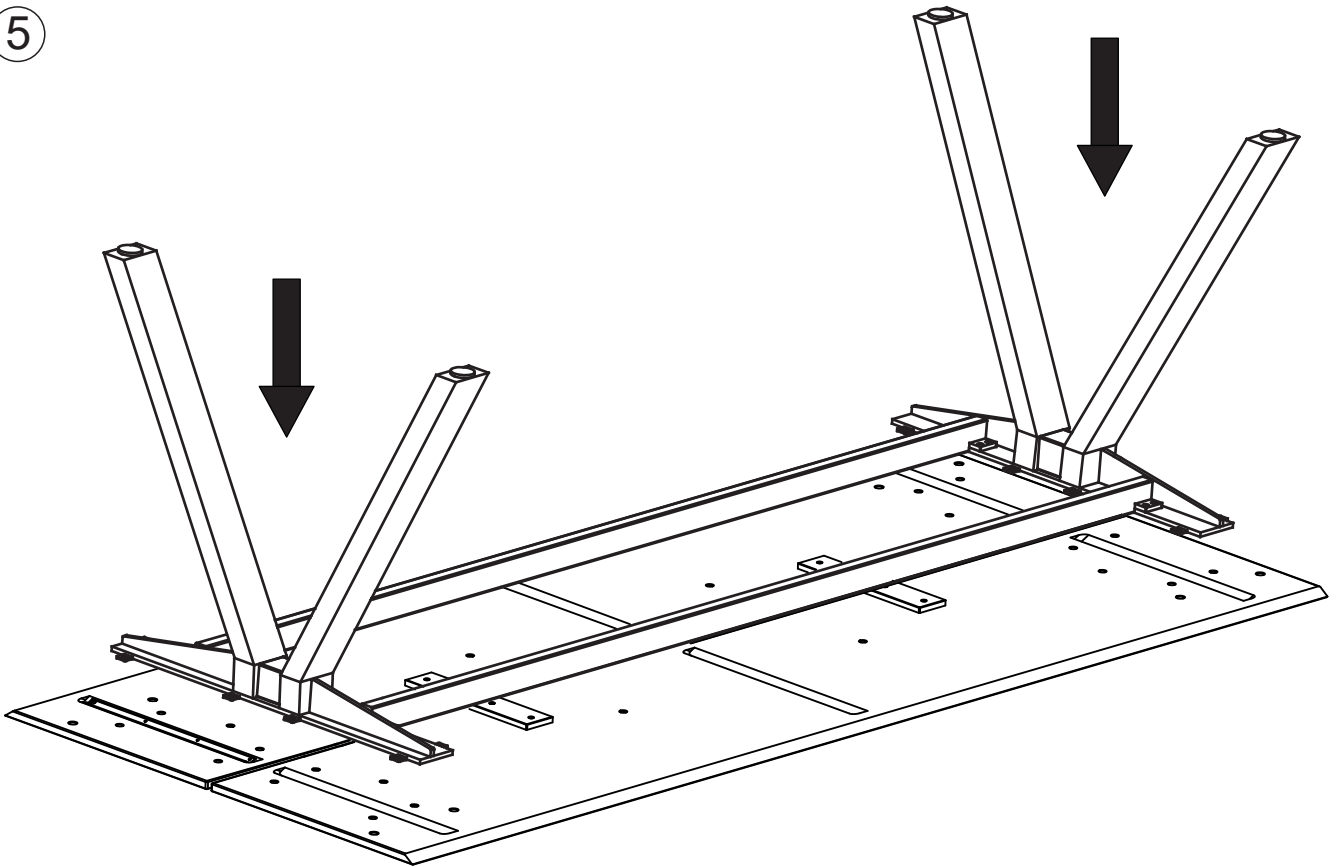


6




Dra inte åt skruvarna helt, förrän samtliga skruvar är monterade.
Do not tighten the screws completely, until all screws are assembled.

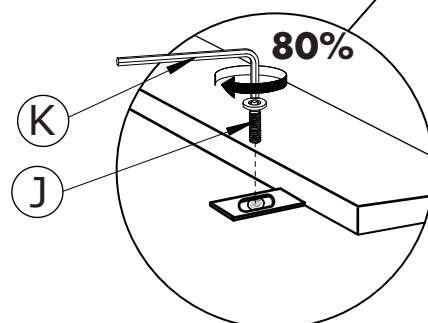
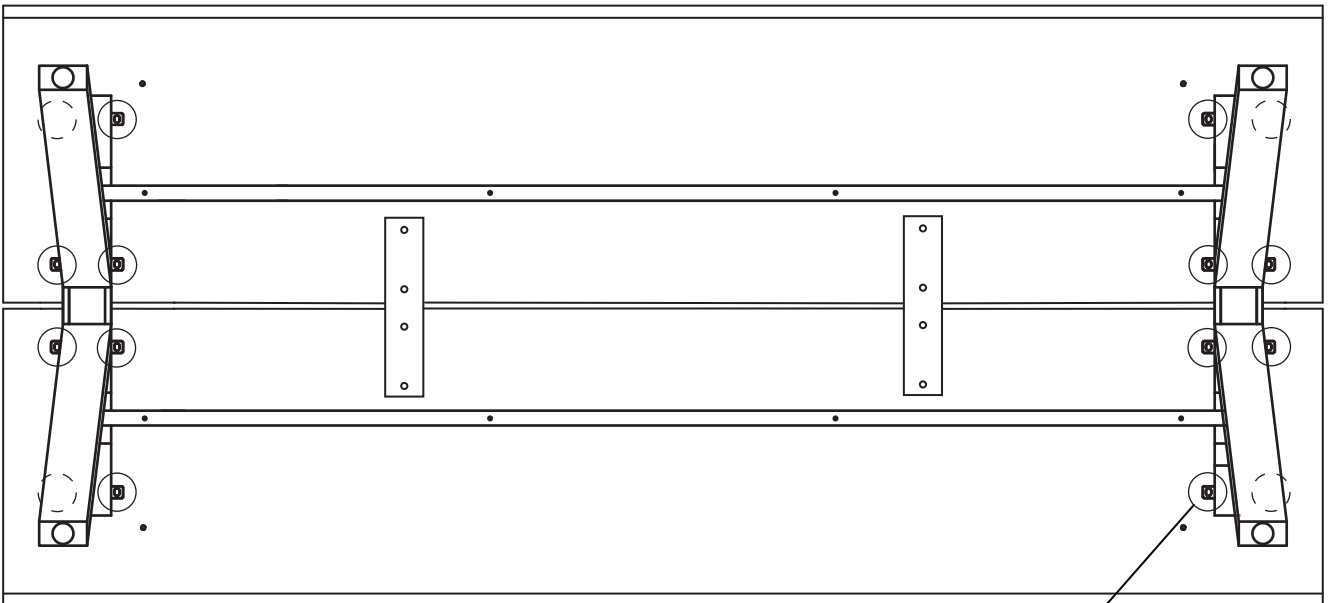


7

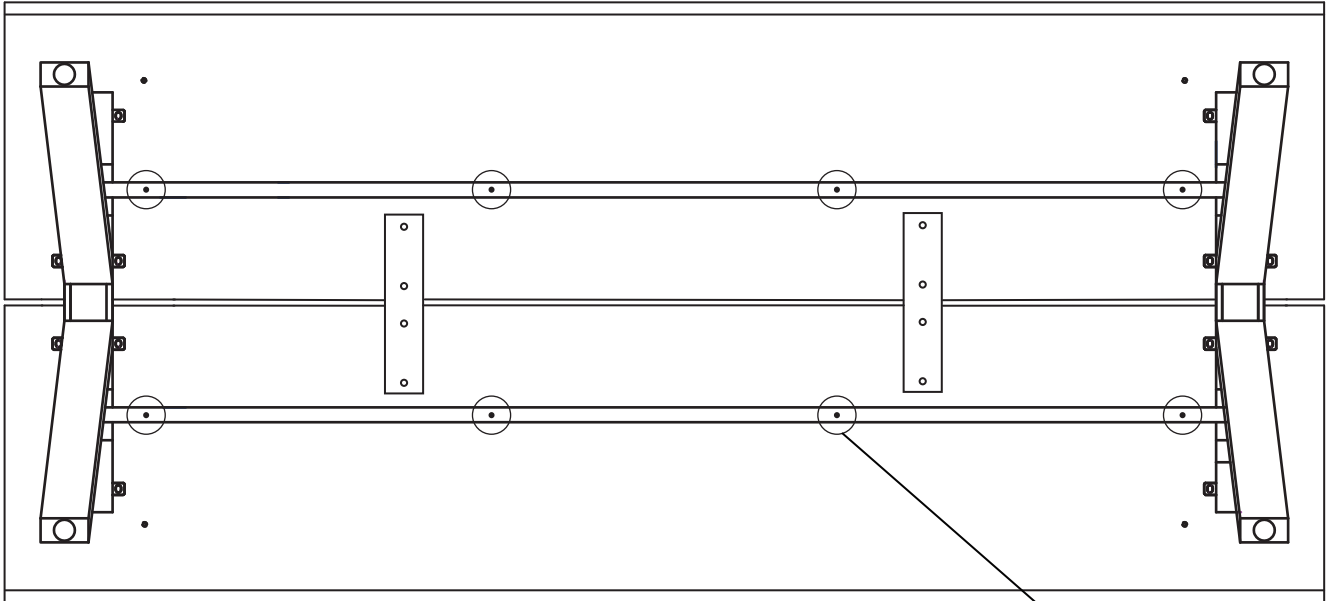

 Dra åt skruvarna helt.
Tighten the screws fully.

100%

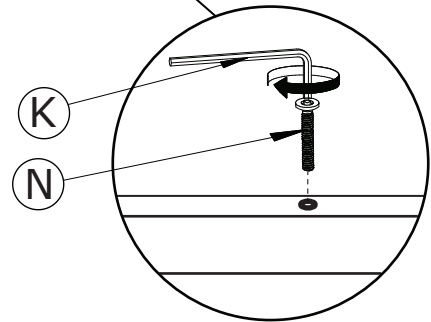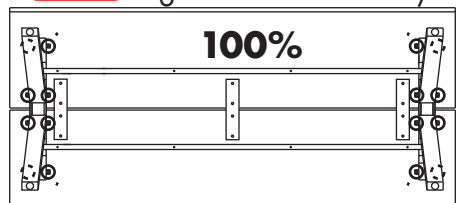

8

